



SIGNAL	TYP
MIC_BIAS	2V1
V_ISUP	2V7
BL_VDD	3V25
VCC_SYN	2V7
VCC_RX_TX	2V7
VCC_RF_VCO	2V7
VCC_RX_BURST	2V7
VDD1	1V35 2V35
VDD2	2V85

SIGNAL	TYP
VDD3	2V85
VDD_VIB	3V05
AVDD	2V65
AVDD_TEMP	2V65
VDDAMP	3V05
VDD_KEY	2V95
VCC_CP	4V
SIM_VDD	3V 5V



Digital External Interface

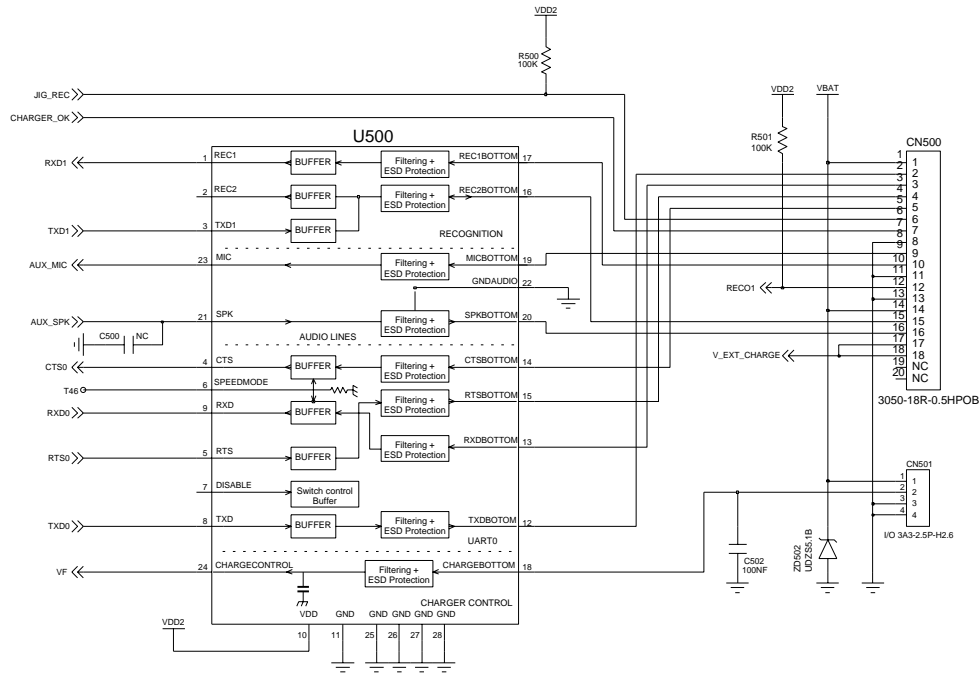

NEW-SPEC J TAG

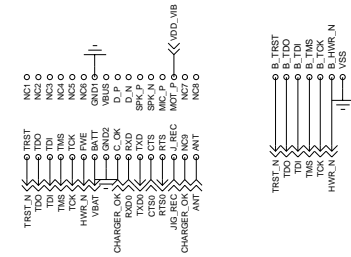


Charge of Battery

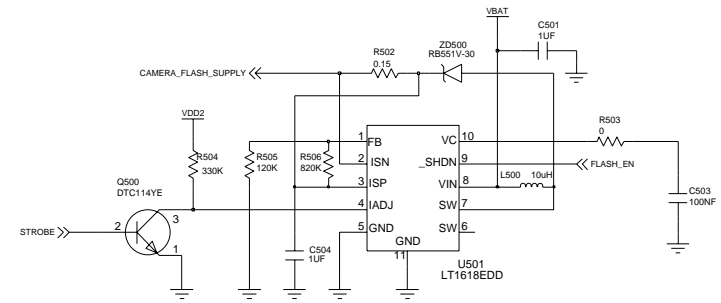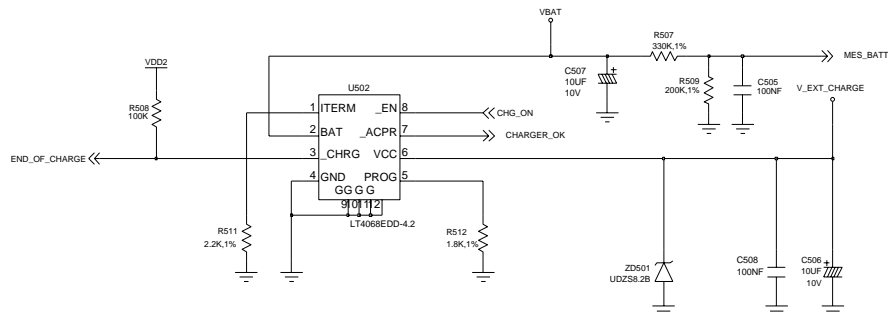


PCB_HOLE




IF Connector & Charging Schematic			
Size	Document Number	SAMSUNG/SGH-E330/B.B/IF & CHARGING	Rev
A3			Rev1.4
Date:	2004.09.10	Sheet	5 of 7

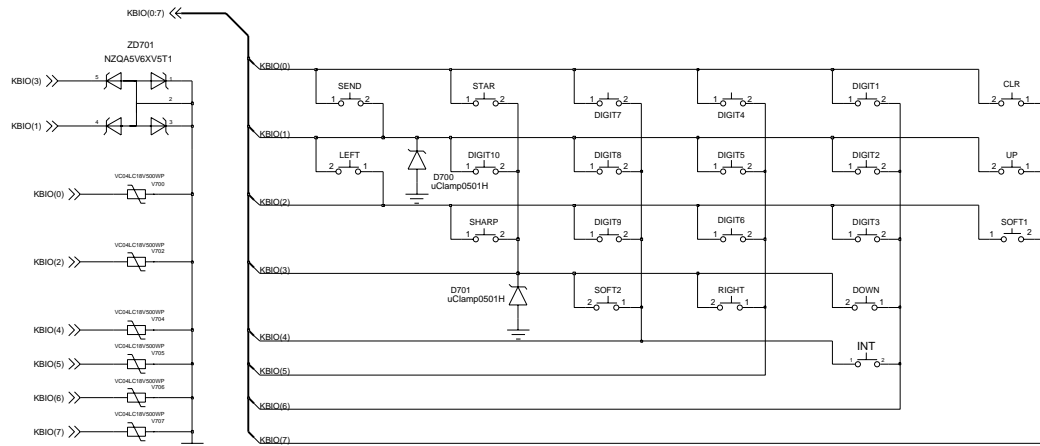


KEY_MAP

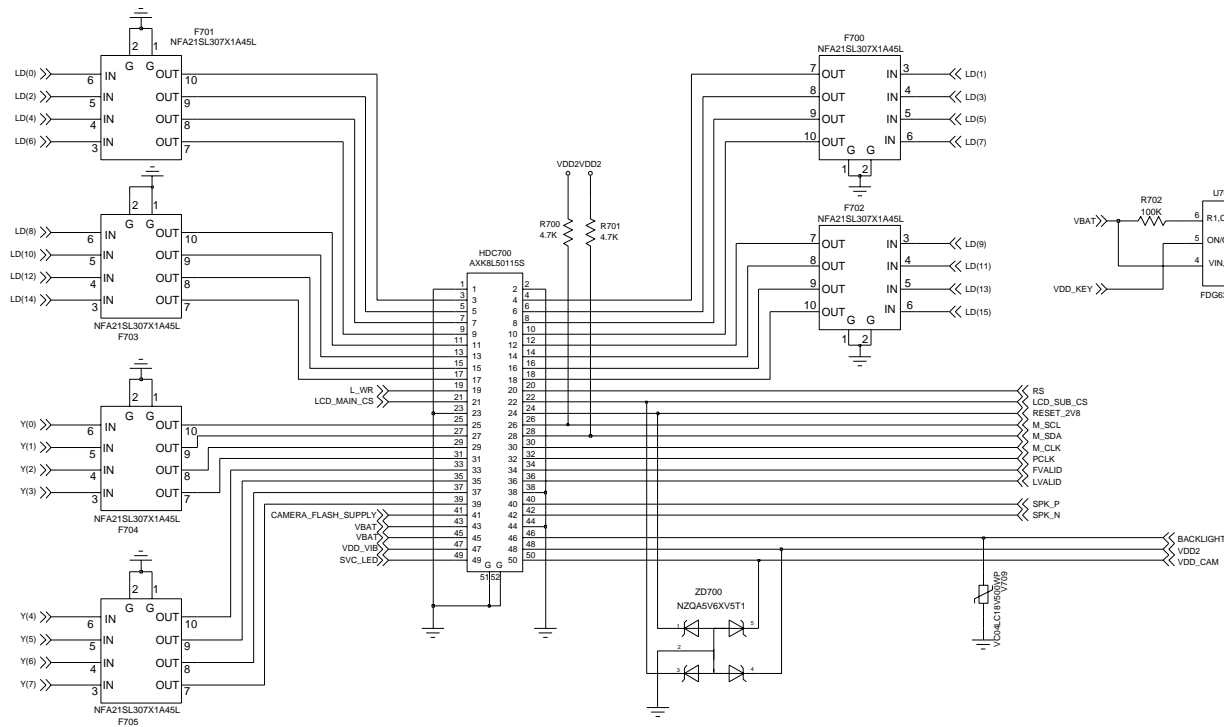


LCD_CONNECTOR

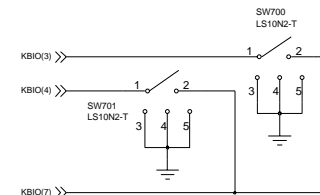


SIDE_KEY



END_KEY

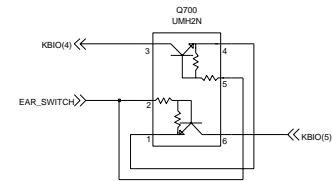

EARPHONE_SWITCH

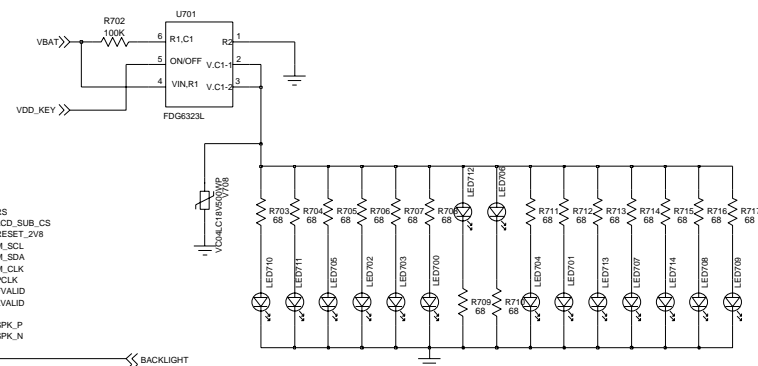

KEY_LED

Title			
KEY Schematic			
Size	Document Number	Rev	
A3	SAMSUNG/SGH-E330/B.B/KEY	REV1.4	
Date:	2004.09.10	Sheet	7 of 7